Setup Guide
Logitech® Broadcaster, Wi-Fi® Webcam

English 4
Deutsch 14
Français 24
www.logitech.com/support 35

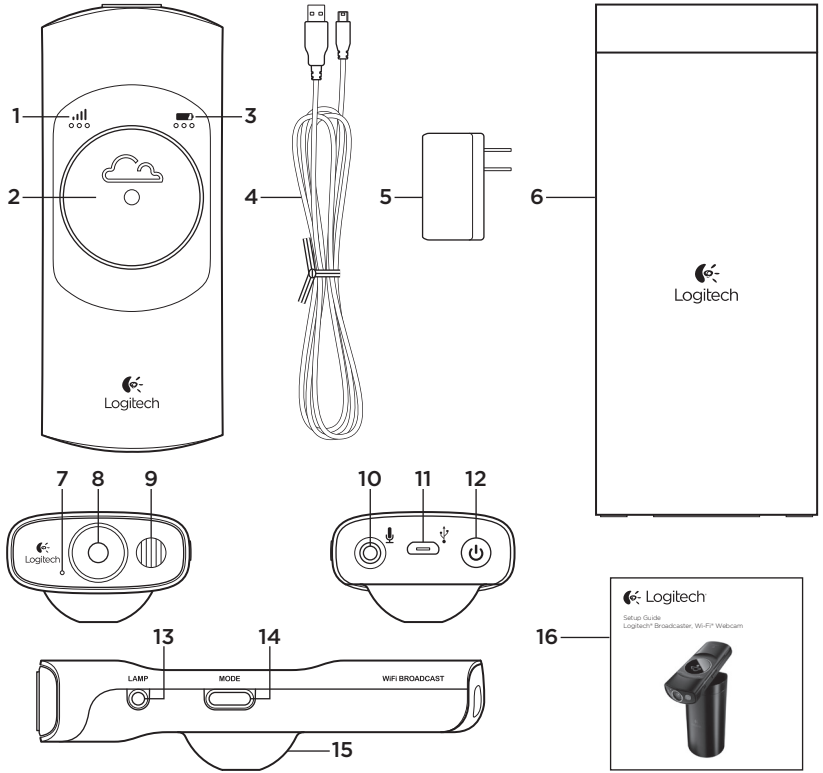

Know your product

1. Wi-Fi® signal strength
2. Capture button
3. Battery level
4. USB cable
5. AC power adapter
6. Stand/case with lid
7. Microphone
8. HD 720p lens
9. Lamp
10. Microphone jack
11. USB port
12. Power button
13. Lamp button
14. Mode button
15. Support ball
16. Documentation

Charge the battery

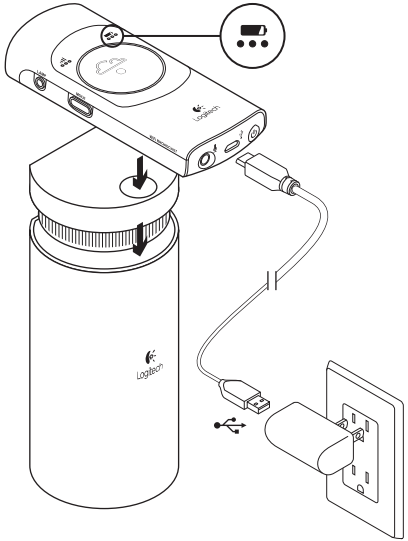

1. Place the camera on the stand.
2. Connect the camera to AC power, as shown.

Note: When the camera battery is fully charged and powered on, the battery level indicator shows three green lights.

Set up your product

If you will use multiple Apple devices with the camera, set up the camera for each device using the following instructions:

On Mac OS X®

1. Go to www.logitech.com/broadcasterapp
2. Download and install the free Logitech Broadcaster software for Mac.
3. Launch the software. Follow the on-screen instructions.
4. Watch the tutorials after setup to learn how to use Logitech Broadcaster.

On iPhone® and iPad®

1. Open the Apple® app store and browse for the free Logitech Broadcaster app.
2. Download and install the app.
3. Open the app and follow the on-screen instructions.
4. Watch the tutorials after setup to learn how to use Logitech Broadcaster.

Visit Product Central

There's more information and support online for your product. Take a moment to visit Product Central to learn more about your new Logitech Broadcaster.

Browse online articles for setup help, usage tips, or information about additional features.

Connect with other users in our Community Forums to get advice, ask questions, and share solutions.

At Product Central, you'll find a wide selection of content:

- Tutorials
- Troubleshooting
- Support community
- Software downloads
- Online documentation
- Warranty information
- Spare parts (when available)

Go to **www.logitech.com/support/broadcaster-mac**

Use your product

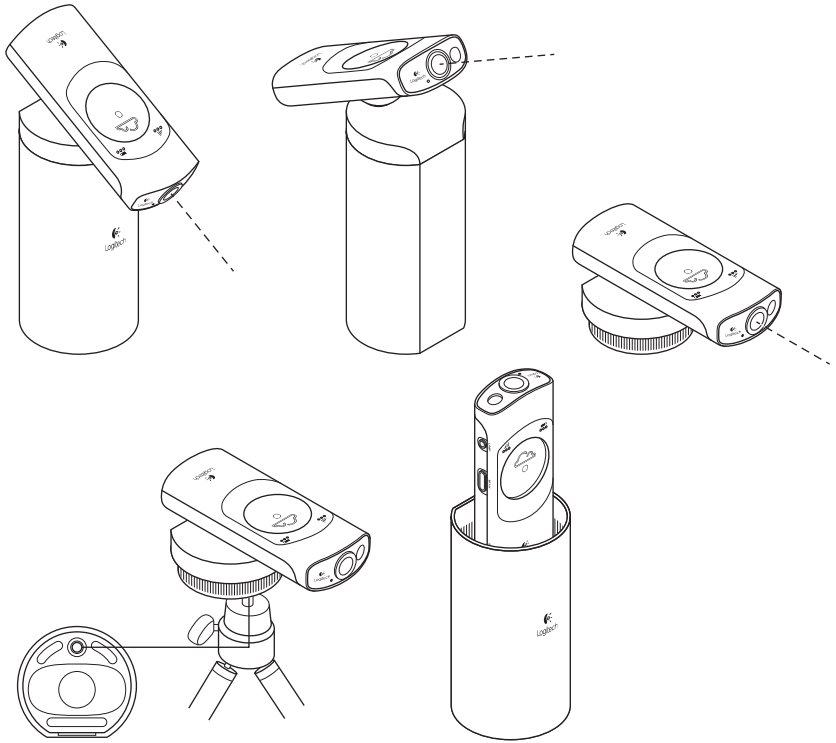

Place the camera

Mount the camera on its stand or use an optional tripod (not included). When not in use, store the camera in its case.

Turn on the camera

Each time you turn on the camera, it goes through a start-up sequence:

1. The battery level lights blink green for 30 seconds before the indicator turns solid green.
2. The camera connects to your Wi-Fi network:
   a. The Wi-Fi signal strength lights blink green sequentially.
   b. The Wi-Fi signal strength lights turn solid green after the Wi-Fi connection is made.

Broadcast to USTREAM® or record to device

1. Open the Broadcaster iOS App on your Apple® mobile device. Or open the Broadcaster software on your Mac.
2. Use the Broadcaster iOS App/software to:
   a. Choose either Broadcast to USTREAM or Record to Device.
   b. Begin broadcasting or recording. (Or press the capture button on the camera.)
   c. Control your streaming video.
   d. Stop broadcasting/recording. (Or press the capture button.)

Note: USTREAM is a live broadcasting Internet site. For more information, go to www.ustream.tv

Broadcast to USTREAM

Record to device

Usage notes:

- The camera can broadcast directly to USTREAM without an Apple device. If the cloud icon is lit, press the capture button to begin broadcasting. If the cloud icon is not lit, press the mode button for Broadcast mode, and then press the capture button.
- If you have set up the camera on multiple Apple devices, you can only use one device at a time to control the camera.
- To switch between devices, close the Broadcaster app/software on your current device before opening the app/software on another device.
- On a Mac, the camera functions like a webcam and works with most Mac applications designed for webcams. So you can record in QuickTime® and make video calls with FaceTime®, iChat®, or Skype. For an optimal video calling experience, we recommend placing a call using a headset. Using your computer speakers may reduce the sound quality and introduce echo.
- On an iPad or iPhone, the camera works only with the Logitech Broadcaster app for Apple iOS, which allows you to record video or broadcast to USTREAM.

Troubleshooting

The camera doesn't connect to my Wi-Fi network (the Wi-Fi signal strength lights blink sequentially and don't turn solid green)

- The camera and your Apple device must be within 50 feet (15 meters) of your Wi-Fi network.
- For some Wi-Fi networks, the camera may take one to two minutes to connect.
- Try rebooting the camera: press and hold the power button for 5 seconds.

The camera's Wi-Fi strength lights show a network connection, but the camera is not detected by the Broadcaster app/software

- The camera and your Apple device must be on the same Wi-Fi network.
- Your Wi-Fi router may be blocking Apple's Bonjour® network service discovery. For troubleshooting help, go to www.logitech.com/support/broadcaster-mac.

Video capture is not smooth, is of poor quality, or freezes on USTREAM

- Verify that your camera's Wi-Fi signal strength indicator shows three green lights.
- There may be too many high-bandwidth devices using your Wi-Fi network at the same time. Or other devices (routers, microwave ovens, etc.) may be causing interference.
- To stream 720p video from the camera to USTREAM, your Internet connection must have a minimum upload speed of 2 Mbps.
- Your Wi-Fi router or modem must be 802.11 g/n compatible.
- For more networking help, go to www.logitech.com/support/broadcaster-mac.

The sound level is too low or there is distorted sound

- For low sound, increase the recording level using the “Inspector” feature in the Broadcaster app/software. Try moving closer to the camera.
- For distorted sound, the camera may be recording audio from your Apple device or another sound source. Reduce volume on all sound sources.

What do you think?

Please take a minute to tell us.
Thank you for purchasing our product.

www.logitech.com/ithink

Battery disposal at product end of life

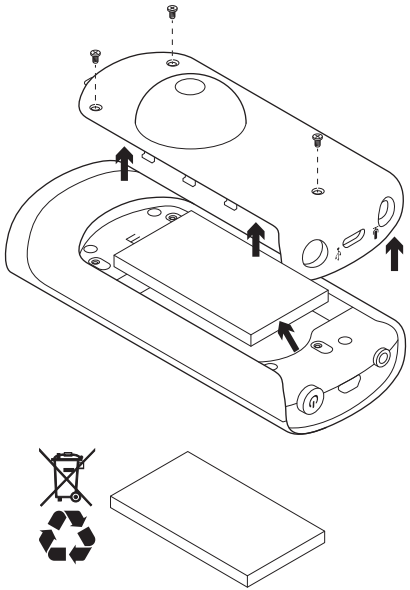

1. Remove the 3 screws on the battery door.
2. Remove the battery door.
3. Remove the battery.
4. Dispose of your product and its battery according to local laws.

www.logitech.com/support/broadcaster-mac

België/Belgique	Dutch: +32-(0)2 200 64 44; French: +32-(0)2 200 64 40
Česká Republika	+420 239 000 335
Danmark	+45-38 32 31 20
Deutschland	+49-(0)69-51 709 427
España	+34-91-275 45 88
France	+33-(0)1-57 32 32 71
Ireland	+353-(0)1 524 50 80
Italia	+39-02-91 48 30 31
Magyarország	+36 (1) 777-4853
Nederland	+31-(0)-20-200 84 33
Norge	+47-(0)24 159 579
Österreich	+43-(0)1 206 091 026
Polska	00800 441 17 19
Portugal	+351-21-415 90 16
Россия	+7(495) 641 34 60
Schweiz/Suisse Svizzera	D +41-(0)22 761 40 12 F +41-(0)22 761 40 16 I +41-(0)22 761 40 20 E +41-(0)22 761 40 25
South Africa	0800 981 089
Suomi	+358-(0)9 725 191 08
Sverige	+46-(0)8-501 632 83
Türkiye	00800 44 882 5862
United Arab Emirates	8000 441-4294
United Kingdom	+44-(0)203-024-81 59
European, Mid. East., & African Hq. Morges, Switzerland	English: +41-(0)22 761 40 25 Fax: +41-(0)21 863 54 02
Eastern Europe	English: 41-(0)22 761 40 25
United States	+1 646-454-3200
Argentina	+0800 555 3284
Brasil	+0800 891 4173
Canada	+1-866-934-5644
Chile	+1230 020 5484
Colombia	01-800-913-6668
Latin America	+1 800-578-9619
Mexico	01.800.800.4500

Logitech®

www.logitech.com

© 2012 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. Apple, the Apple logo, Bonjour, FaceTime, iChat, iPad, iPhone, Mac, Mac OS X, and QuickTime are trademarks of Apple Inc., registered in the U.S. and other countries. Apple and Apple Store are service marks of Apple Inc., registered in the U.S. and other countries. The app Store is a service mark of Apple Inc. Skype is a trademark of Skype or other related companies. Skype is registered in the United States Patent and Trademark Office, and with the Trademark Offices of the countries of Australia, Finland, Benelux, Hong Kong, Israel, Japan, Liechtenstein, New Zealand, South Korea, Switzerland, and Taiwan. Wi-Fi is a registered trademark of the Wi-Fi Alliance. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

620-004430.005